

Chapter 3: DSC Panels (done)

- [DSC Standard PowerSeries Dialler Programming](#)
- [DSC Neo Dialler Programming](#)

DSC Standard PowerSeries Dialler Programming

Standard DSC PowerSeries programming to get reporting working with Finmon GSM Communicators.

Basic Programming

Location 301

- Enter **5555555** (tel number)
- LCD Keypad: Backspace and remove 'D', then enter 5's

Location 303

- Enter **5555555** (backup tel number)

Location 310

- Enter four digit account code followed by FF
- Example: For account code 1234, program **1234*66**
- The *66 represents FF

Location 311

- Enter four digit account code only (e.g., **1234**)

Location 350

- Enter **0303**

Location 380

- LED 1 must be **ON**

Location 381

- LED 7 must be **OFF**
- This writes Contact ID into reporting codes

24 Hour Test Configuration

Location 702

- LED 2 must be **ON**
 - LED 3 must be **ON** (enables 24hr test)
-

PGM Configuration (if using triggers)

For panels with LED keypads (carat in front of numbers):

Location 009

- Program **1010** (System event with options for PGM 1 and 2)

Location 501

- LED 2,3,4,5,6,7,8 **ON** (Panic on PGM1)

Location 502

- LED 1 and 8 **ON** (Burglary on PGM2)
-

Tips for Older Panels

Identifying an old panel:

- Location 310 only accepts 4 digits (no FF option)

For old panels:

- Use Location 360 instead of 350 for Contact ID
- Programming is otherwise similar

DSC Neo Dialler Programming

DSC Neo panels with sub-locations (usually with LCD keypads)

Accessing Programming

- Press ***8**
 - Enter Installer Code (default installer code is **5555**)
-

Location Programming

Location 301

- Sub 001: Remove 'D' and enter **555 5555** (Tel number 1)
- Sub 004: Remove 'E' (Tel number 4)

Location 310

- Sub 000: Enter **[4-digit account number]** (Global)
- Sub 001: Enter **[4-digit account number]** for Partition 1

Location 350

- Sub 001: Choose **Contact ID**

Location 377

- Scroll to "Test Tx Cycle"
- Enter **001** days

Location 380

- Ensure communicator is **enabled**
-

Programming Tips

- Always remove default characters (D, E) before entering phone numbers
- Test transmission after enabling communicator in Location 380
- Use arrow keys to navigate between sub-locations
- Save changes before exiting each location