

Caddx NX Dialler Programming

Caddx NX (NX4 & NX8) series panels connected via Tip & Ring

Location Programming

Location 0

- Segment 1 = **13** (force dial)
- Segment 2 = **15** (Tone dialling)
- Segment 3 to 9 = **5555555** (Tel number)

Location 1

- Segment 1 to 4 = **[account code]**

Location 2

- Enter **1** for Contact ID

Location 4

- LED 2 **ON** for openings/closings

Partition Account Codes

If using multiple partitions:

- **Location 89** - Partition 2 account code
- **Location 92** - Partition 3 account code
- **Location 95** - Partition 4 account code

Differences from Standard Caddx

- Location 4 specifically controls opening/closing reports
- More reliable communication than older Caddx models

Troubleshooting Tips

- If openings/closings aren't reporting, verify Location 4 LED 2 is ON
- Ensure all partition account codes are programmed if using partitions
- Force dial is still required (Location 0, Segment 1 = 13)

Revision #3

Created 30 July 2026 09:30:03 by Jonathan Cox

Updated 4 August 2026 12:21:36 by Jonathan Cox