

Caddx Standard Dialler Programming

Standard Caddx panels connected via Tip & Ring

Location Programming

Location 0

- Segment 1 = **13** (force dial)
- Segment 2 = **15** (Tone dialling)
- Segment 3 to 9 = **5555555** (Tel number)

Location 1

- Segment 1 to 4 = **[account code]**

Location 2

- Enter **1** for Contact ID
 - On older panels: Enter **13**
-

Partition Account Codes

If using multiple partitions, program account codes for each:

- **Location 89** - Partition 2 account code
 - **Location 92** - Partition 3 account code
 - **Location 95** - Partition 4 account code
-

Important Notes

- Force dial (segment 1 = 13) is critical for Caddx panels
 - Always verify tone dialling is enabled (segment 2 = 15)
 - Test each partition if multiple partitions are programmed
 - Older panels may require "13" in Location 2 instead of "1"
-

Revision #2

Created 30 July 2026 09:30:03 by Jonathan Cox

Updated 4 August 2026 12:20:32 by Jonathan Cox