

DSC Neo Dialler Programming

DSC Neo panels with sub-locations (usually with LCD keypads)

Accessing Programming

- Press ***8**
 - Enter Installer Code (default installer code is **5555**)
-

Location Programming

Location 301

- Sub 001: Remove 'D' and enter **555 5555** (Tel number 1)
- Sub 004: Remove 'E' (Tel number 4)

Location 310

- Sub 000: Enter **[4-digit account number]** (Global)
- Sub 001: Enter **[4-digit account number]** for Partition 1

Location 350

- Sub 001: Choose **Contact ID**

Location 377

- Scroll to "Test Tx Cycle"
- Enter **001** days

Location 380

- Ensure communicator is **enabled**
-

Programming Tips

- Always remove default characters (D, E) before entering phone numbers
 - Test transmission after enabling communicator in Location 380
 - Use arrow keys to navigate between sub-locations
 - Save changes before exiting each location
-

