

DSC Standard PowerSeries Dialler Programming

Standard DSC PowerSeries programming to get reporting working with Finmon GSM Communicators.

Basic Programming

Location 301

- Enter **5555555** (tel number)
- LCD Keypad: Backspace and remove 'D', then enter 5's

Location 303

- Enter **5555555** (backup tel number)

Location 310

- Enter four digit account code followed by FF
- Example: For account code 1234, program **1234*66**
- The *66 represents FF

Location 311

- Enter four digit account code only (e.g., **1234**)

Location 350

- Enter **0303**

Location 380

- LED 1 must be **ON**

Location 381

- LED 7 must be **OFF**
- This writes Contact ID into reporting codes

24 Hour Test Configuration

Location 702

- LED 2 must be **ON**
 - LED 3 must be **ON** (enables 24hr test)
-

PGM Configuration (if using triggers)

For panels with LED keypads (carat in front of numbers):

Location 009

- Program **1010** (System event with options for PGM 1 and 2)

Location 501

- LED 2,3,4,5,6,7,8 **ON** (Panic on PGM1)

Location 502

- LED 1 and 8 **ON** (Burglary on PGM2)
-

Tips for Older Panels

Identifying an old panel:

- Location 310 only accepts 4 digits (no FF option)

For old panels:

- Use Location 360 instead of 350 for Contact ID
 - Programming is otherwise similar
-

Revision #4

Created 30 July 2026 09:30:03 by Jonathan Cox

Updated 4 August 2026 12:24:54 by Jonathan Cox