

IDS816 Programming

IDS816 panel programming locations

Basic Programming

Location 111

- LED 1 **ON**
- All other LEDs **OFF**

Location 116

- Enter **5** for Contact ID

Location 121

- Enter **555555**

Location 128 Sub 2

- Enter **[Account code]**
-

Programming Tips

- Ensure only LED 1 is on in location 111
 - Double-check sublocation 2 for account code
 - Test communication after programming
-

Revision #1

Created 30 July 2026 09:30:03 by Jonathan Cox

Updated 30 July 2026 09:30:03 by Jonathan Cox