

Paradox Evo 192 Triggers

Configuration for direct trigger inputs using PGM outputs

Prerequisites

Before starting:

1. Ensure jumper for PGMs is set to **positive** on panel motherboard
2. If not set:
 - Shut down panel
 - Change jumper position
 - Power up again

Important: PGM1 stays negative - only PGM 2, 3, and 4 become positive

PGM2 Configuration (Panic)

Location 0920

- Enter: **030 255 000 000**

Location 0928

- Enter: **005**

Location 0929

- LEDs 1 and 3 **ON**
-

PGM3 Configuration (Burglary)

Location 0930

- Enter: **024 255 000 000**

Location 0938

- Enter: **005**

Location 0939

- LEDs 1 and 3 **ON**
-

PGM4 Configuration (Open and Close)

Location 0940

- Enter: **064 255 000 000**

Location 0948

- Enter: **000**

Location 0949

- All LEDs **OFF**
-

Wiring Notes

- Connect radio's Z4 (AC fail) to 1st AC connect block on panel
 - Keep PGM wiring away from high voltage lines
 - Test each PGM after configuration
-

Revision #1

Created 30 July 2026 09:30:04 by Jonathan Cox

Updated 30 July 2026 09:30:04 by Jonathan Cox