

Paradox MG5050, SP6000 & SP65 Serial Programming (done)

Tested on Plus range version 1.30

Serial Programming Notes

these are **MANDATORY**:

Section 910

- Must be cleared using sleep button (once per digit)

Section 911

- Must be cleared using sleep button (once per digit)

Troubleshooting Tips

1. **Panel won't send despite correct programming:**
 - Rarely, a default may be needed
 - Power down, default, reprogram
 2. **Account number issues:**
 - MUST be entered at both 811 and 812
 - With LED keypad: type account code twice at loc 811
 3. **6500 Panel on serial:**
 - Does not send account code
 - Only sends signal ONCE
-

Clear Event Buffer

For 5050 and 6000:

1. Enter programming mode
2. Press Stay key once
3. Press Clear key once
4. Power panel down
5. Power up and send signals

For SP65:

- Press Power button → Installer code → Memory → 9 → Enter key
-

Revision #2

Created 15 October 2026 07:16:33 by Jonathan Cox

Updated 15 October 2026 07:17:57 by Jonathan Cox