

Risco Configuration

Complete programming guide for Risco panels

Accessing Programming

1. Press **MENU BUTTON**
 2. Enter **INSTALLER CODE** (Default: 1111)
 3. Navigate to "**PROGRAMMING**" → ENTER
 4. Navigate to "**COMMUNICATION**" → ENTER
-

Monitoring Station Setup

Navigate to "**MONITORING STATION (MS)**" → ENTER

Navigate to "**MONITORING STATION 1 (MS 1)**" → ENTER

Configure the following:

- **TYPE** = VOICE
 - **CHANNEL** = PSTN/GSM
 - **ACCOUNT** = 6 digit code provided by office (e.g., 001052)
 - **PHONE** = 555 555 5
 - **MS RETRIES** = 3
-

Timer Configuration

Navigate to "**TIMERS**":

- **CANCEL DELAY** = 0
 - **ABORT ALARM** = 0
-

Periodic Test Setup

Navigate to "**PERIODIC TEST**":

- **TIME** = 2200 (for 10:00 PM test)
 - **RECURRENCE** = EVERY 1 DAY
-

Report Split Configuration

Navigate to "**REPORT SPLIT**":

- **ARM/DISARM** = "NON" for DOMESTIC / "CALL MS1 ONLY" for COMMERCIAL
 - **MS URGENT** = "CALL MS1 ONLY"
 - **MS NON URGENT** = "CALL MS1 ONLY"
-

Cloud Settings

Back to main COMMUNICATION menu

Navigate to "**CLOUD**":

- **MS CALL ALL** = ENABLED
 - **FM CALL ALL** = ENABLED
-

Exit Programming

1. Press MENU
 2. Press MENU
 3. Press MENU, 0, ENTER to exit
-
-

Revision #1

Created 30 July 2026 09:30:04 by Jonathan Cox

Updated 30 July 2026 09:30:04 by Jonathan Cox