

Texecom 412/816/832 Dialler Programming(done)

Version Information

Texecom 412/816:

- Known working app versions: V16.13

Texecom 832:

- Known working versions: v13, v14 (E)
-

Basic Programming

Access Programming:

- Installer code + Menu + 9
- Default installer code: **1234**

Location 70

- Switch ON LEDs 1, 2, 5, and 8
- Press ARM button to confirm

Location 71 Programming:

- **71/0** = **5555555** (tel number) - Press ARM button
- **71/1** = **[4-digit account number]** - Press ARM button
- **71/2** = **4** (Contact ID) - No need to press ARM
- **71/3** = **6** (dial attempts) - No need to press ARM
- **71/5** = Switch ON all LEDs - Press ARM button
- **71/8** = LED 8 OFF for Tip & Ring

Location 76

- **76/8** = LED 8 ON (Dialler)
-

Converting from Serial to Tip & Ring

If panel was previously on serial and now using Tip & Ring:

- **71/8 = 0**
 - **76/5 = 0**
-
-

Revision #3

Created 19 October 2026 08:50:03 by Jonathan Cox

Updated 19 October 2026 10:04:40 by Jonathan Cox