

Texecom 412/816/832 Serial Programming (done)

Standard Texecom panels with **red serial cable**

Version Information

Texecom 412/816:

- Known working app versions: V16.13

Texecom 832:

- Known working versions: v13, v14 (E)

Note: Texecom Elite panels are NOT supported on app, but work with serial for CID

Basic Programming

Access Programming:

- Installer code + Menu + 9
- Default installer code: **1234**

Texecom 412 Serial Specific

Known working app version: V14

Location 70

- Switch ON LEDs 1, 2, and 8 only
- Press ARM button

Additional for Serial:

- **71/8** = Switch ON 8
- **76/5** = **3** (com IP on Comm 1)

OR (NOT BOTH)

- **76/9** = **3** (com IP on Comm 2)

Converting from Serial to Tip & Ring

If panel was previously on serial and now using Tip & Ring:

- **71/8 = 0**
- **76/5 = 0**

Special Notes

Texecom 816:

- Serial cable connection must be a Texecom GSM type

Revision #2

Created 19 October 2026 09:00:27 by Jonathan Cox

Updated 19 October 2026 10:04:21 by Jonathan Cox