

Texecom MiAlarm PANEL MODE

Configuration for MiAlarm compatibility

Note: Texecom Elite panels are NOT supported on app, but work with serial for CID

Programming Steps

1. **Enter Programming Mode**
 - Enter Installer Code
 - Press Menu button
 - Press 9
 2. **Location 76/0**
 - Press location 76
 - Press sublocation 0
 - Ensure LED 1 is **ON**
 - If not ON: Press 1, then YES/Tick button
 3. **Location 76/2**
 - Press location 76
 - Press sublocation 2
 - Enter UDL code: **1234**
 - Press YES/Tick button
 4. **Location 76/5**
 - Press location 76
 - Press sublocation 5
 - Press **3**
 5. **Exit Programming**
 - Press Menu button
 - Press 99
-

Important Notes

- This configuration enables MiAlarm compatibility
-

Revision #1

Created 30 July 2026 09:30:04 by Jonathan Cox

Updated 30 July 2026 09:30:04 by Jonathan Cox