

Trigger Inputs Z1-4 on Transmitter

This page covers the configuration of direct trigger inputs on the Finmon transmitter.

Default Configuration

Factory Default Account Code: 9998

When a transmitter is connected to a panel via serial/dialler:

- The panel will automatically update the radio with its account code on first signal
 - If the account code is changed on the panel, it will update the radio again
-

Direct Connection to Z1-4

When connecting directly to trigger inputs (not through a panel):

1. Account Code Programming

- Must be set by dialling into the radio over the internet
- Use Finmon website: [Finmon Portal](#)
- **REFER TO YOUR FINMON CONSULTANT OR CONTROL ROOM**

2. Voltage Requirements

- The radio requires a positive 12v trip on any of the triggers.
 - Ensure clean, stable 12v signal
-

Default Trigger Assignments

Input	Default Function
Z1	Panic
Z2	Burglary
Z3	Open by user / Close by User
Z4	AC Failure

Reprogramming Triggers

The trigger inputs can be reprogrammed for any Contact ID reporting code:

- Examples: supervisor on site, pump failure, temperature alarm
 - Access required via Finmon website
 - Contact Finmon support for custom programming
-

Wiring Notes

- Use appropriate gauge wire for 12v signals
 - Keep wiring runs as short as practical
 - Avoid running trigger wires parallel to AC power
 - Use shielded cable in high-interference environments
-

Revision #2

Created 30 July 2026 09:30:03 by Jonathan Cox

Updated 4 August 2026 12:16:42 by Jonathan Cox