

# Chapter 3: DSC Panels

- [DSC Generic Programming](#)
- [DSC Neo Programming](#)

# DSC Generic Programming

Standard DSC panels connected via Tip & Ring

---

## Basic Programming

### Location 301

- Enter **5555555** (tel number)
- LCD Keypad: Backspace and remove 'D', then enter 5's

### Location 303

- Enter **5555555** (backup tel number)

### Location 310

- Enter four digit account code followed by FF
- Example: For account code 1234, program **1234\*66**
- The \*66 represents FF

### Location 311

- Enter four digit account code only (e.g., **1234**)

### Location 350

- Enter **0303**

### Location 380

- LED 1 must be **ON**

### Location 381

- LED 7 must be **OFF**
  - This writes Contact ID into reporting codes
- 

## 24 Hour Test Configuration

### Location 702

- LED 2 must be **ON**

- LED 3 must be **ON** (enables 24hr test)
- 

## PGM Configuration (if using triggers)

For panels with LED keypads (carat in front of numbers):

### **Location 009**

- Program **1010** (System event with options for PGM 1 and 2)

### **Location 501**

- LED 2,3,4,5,6,7,8 **ON** (Panic on PGM1)

### **Location 502**

- LED 1 and 8 **ON** (Burglary on PGM2)
- 

## Tips for Older Panels

### **Identifying an old panel:**

- Location 310 only accepts 4 digits (no FF option)

### **For old panels:**

- Use Location 360 instead of 350 for Contact ID
- Programming is otherwise similar

# DSC Neo Programming

DSC Neo panels with sub-locations (usually with LCD keypads)

---

## Accessing Programming

- Press **\*8**
  - Enter Installer Code (default installer code is **5555**)
- 

## Location Programming

### Location 301

- Sub 001: Remove 'D' and enter **555 5555** (Tel number 1)
- Sub 004: Remove 'E' (Tel number 4)

### Location 310

- Sub 000: Enter **[4-digit account number]** (Global)
- Sub 001: Enter **[4-digit account number]** for Partition 1

### Location 350

- Sub 001: Choose **Contact ID**

### Location 377

- Scroll to "Test Tx Cycle"
- Enter **001** days

### Location 380

- Ensure communicator is **enabled**
- 

## Programming Tips

- Always remove default characters (D, E) before entering phone numbers
- Test transmission after enabling communicator in Location 380
- Use arrow keys to navigate between sub-locations
- Save changes before exiting each location