

# DSC Generic Programming

Standard DSC panels connected via Tip & Ring

---

## Basic Programming

### Location 301

- Enter **5555555** (tel number)
- LCD Keypad: Backspace and remove 'D', then enter 5's

### Location 303

- Enter **5555555** (backup tel number)

### Location 310

- Enter four digit account code followed by FF
- Example: For account code 1234, program **1234\*66**
- The \*66 represents FF

### Location 311

- Enter four digit account code only (e.g., **1234**)

### Location 350

- Enter **0303**

### Location 380

- LED 1 must be **ON**

### Location 381

- LED 7 must be **OFF**
- This writes Contact ID into reporting codes

---

## 24 Hour Test Configuration

### Location 702

- LED 2 must be **ON**

- LED 3 must be **ON** (enables 24hr test)
- 

## PGM Configuration (if using triggers)

For panels with LED keypads (carat in front of numbers):

### Location 009

- Program **1010** (System event with options for PGM 1 and 2)

### Location 501

- LED 2,3,4,5,6,7,8 **ON** (Panic on PGM1)

### Location 502

- LED 1 and 8 **ON** (Burglary on PGM2)
- 

## Tips for Older Panels

### Identifying an old panel:

- Location 310 only accepts 4 digits (no FF option)

### For old panels:

- Use Location 360 instead of 350 for Contact ID
  - Programming is otherwise similar
- 

Revision #5

Created 10 June 2025 10:22:45 by Calvin van Wieringen

Updated 19 June 2025 09:41:23 by Jonathan Cox