

IDS X64 Programming

Complete guide for all X64 variants

Basic Programming (All Versions)

Location 41

- Default setting usually fine
- Set to **5** for Contact ID on Telephone Number 1

Location 46

- Subloc 1 (LED 1): **ON** for Tone dialling
- Subloc 2 (LED 2): **OFF**
- Subloc 3 (LED 3): **OFF**

Location 47

- Set to **6**

Location 51

- Enter **5555555** (seven 5's)

Location 61-68 (Account Codes)

- Loc 61: Partition 1 account code (4 digits)
- Loc 62: Partition 2 account code
- Loc 63-68: Partitions 3-8 account codes

Location 71 (72 = P2 -> 78 = P8)

- Serial account code (same as partition account code)

Location 196

- Must be **000000**

Location 501-564

- Option 3 must be set to Yes

Enable User Code Bypassing Hold [*] → beep → [MASTER CODE] [*] [1] [0] [*] [USER CODE] [*] [BITMAP] [*] [#]

Bitmap(Option 8) Zone Bypass Enable MUST be set to Yes

Open/Close Reporting by User

For X64 Older than 2017

Programming Sequence: Hold [*] → beep → [MASTER CODE] [*] [1] [4] [*] [USER CODE] [*] [BITMAP] [*] [#]

Enable User Reporting Codes:

Subloc/LED	Default	Action
1	OFF	Set ON to enable close reporting
2	OFF	Set ON to enable stay close reporting
3	OFF	Set ON to enable open reporting
4	OFF	Set ON to enable siren cancel reporting

Important: Must be repeated for EACH user requiring open/close reporting!

For X64 New (2017 onwards)

1. Enter Installer Mode
 2. Go to Partition Arm Options (Locations 211-218)
 3. Enable option 16 (Open/Closing User Reporting), this option is global for all users in the partition.
-

Arm Without User Code Reporting

For quick-arm and key-switch arming:

Locations 581-588 (Split Reporting Data)

- Subloc 7: Set **ON** to enable "Armed without user code" reporting
 - Location 581 for Partition 1
 - Location 582 for Partition 2
 - Locations 583-588 for Partitions 3-8
-

Serial/App Programming

Requirements:

- Panel firmware: V2.80 or above
- GSM firmware: V4.51 or above **OR** E4.19
- Draw power from Aux 12V, **NOT** from serial cable

Programming:

- Loc 40: Ensure value **5** (CID) is programmed
- Loc 61: Account code required
- Loc 196: Must be **000000**

24V Version Additional:

- Loc 71: Account code required
-

Troubleshooting

- If you can connect but get Bypassed zones and are unable to do anything: Check Loc 196 = 000000
 - After changing Loc 196: Remove panel from app and re-add
 - Cannot control panel: Verify user code
 - Connection issues: Check power source (must be Aux 12V)
-

Revision #8

Created 10 June 2025 12:33:46 by Calvin van Wieringen

Updated 18 December 2025 07:55:09 by Jonathan Cox