

# IDS805 Programming

IDS805 panels with **grey serial cable** on external serial connector

---

## Basic Programming

### Locations 43 to 46

- Enter [**Account code**]

### Location 47

- Enter **6** (Contact ID)

### Locations 48 to 54

- Enter **555555**

### Location 151

- Default is 4 dial attempts
  - Enter **0** to disable the dialer
- 

## Important Notes

- Tone and force dialling are enabled by default
  - **LTE GSM must be powered directly from battery**
  - Do not power from panel auxiliary output
- 

## App Configuration

For mobile app connectivity:

### Requirements:

- App version **v4.37** or latest **vE4.xx**
  - Serial Port must be set to **Orisec/IDS805**
  - Requires a **VALID user code**
- 

## Troubleshooting

- If no communication, verify power is from battery

- Test with known working user code
- 

Revision #3

Created 10 June 2025 12:30:37 by Calvin van Wieringen

Updated 24 November 2025 12:35:00 by Jonathan Cox