

IDS806 Programming

IDS806 panels with **red serial cable**

Basic Programming

Locations 43 to 46

- Enter **[Account code]**

Location 47

- Enter **6** (Contact ID)

Locations 48 to 54

- Enter **555555**

Location 196

- Must be **000000**
 - Critical for proper operation
-

Installation Procedure

Important: Follow this exact sequence:

1. Ensure panel power is **OFF**
 2. Connect serial port only (no panel power)
 3. Power up the panel
 4. Serial port will be automatically detected
-

Tested Versions

Successfully tested on firmware versions:

- 1.12
 - 1.13
 - 1.14
 - 1.15
 - 1.88
-

Critical Notes

- Location 196 must be all zeros
 - Panel reboot required after serial connection
 - Red serial cable indicates IDS806 compatibility
-

Revision #2

Created 10 June 2025 12:32:42 by Calvin van Wieringen

Updated 19 June 2025 10:03:33 by Jonathan Cox