

# IDS816 Programming

IDS816 panel programming locations

---

## Basic Programming

### Location 111

- LED 1 **ON**
- All other LEDs **OFF**

### Location 116

- Enter **5** for Contact ID

### Location 121

- Enter **555555**

### Location 128 Sub 2

- Enter **[Account code]**
- 

## Programming Tips

- Ensure only LED 1 is on in location 111
  - Double-check sublocation 2 for account code
  - Test communication after programming
- 

Revision #2

Created 10 June 2025 12:33:14 by Calvin van Wieringen

Updated 19 June 2025 10:04:18 by Jonathan Cox