

# Orisec Configuration

Orisec panels support both Tip/Ring and Com Port connections

---

## Orisec Tip/Ring Configuration

1. Enter **Installer Code**
  2. Select **Programming Menu** → Tick/Enter
  3. Go to **ARC Set up**
  4. **Phone Number:** 555 5555
  5. **Account Number:** As supplied by control room/software
  6. **Protocol:** Contact ID
  7. **Dial Seq:** 1
  8. Any issues with not sending - **RESTART PANEL**
- 

## Orisec Com Port Configuration

1. Enter **Installer Code**
  2. Select **Programming Menu** → Tick/Enter
  3. **Com Port Setup** → Tick/Enter
  4. Select **Com Port number 2**
  5. Set mode to **FINMON** (Required for app)
  6. **Hold Tick** to go back
  7. Go to **ARC Set up**
  8. **Phone Number:** F555 5555 (Note the 'F' prefix)
  9. **Account Number:** As supplied by control room/software
  10. **Protocol:** Contact ID
  11. **Dial Seq:** 6
  12. Any issues with not sending - **RESTART PANEL**
- 

## App Configuration

### Requirements:

- App version must be **v4.37**
  - Serial Port must be set to **Orisec/IDS**
  - **MUST** be set to FINMON under Comm Port Setup
- 

## Critical Notes

## IF YOU AREN'T GETTING SIGNALS OUT:

- **REBOOT THE PANEL**
  - If serial port connected with panel powered up, it won't be detected
  - Always power cycle after connecting serial
- 
- 

Revision #2

Created 10 June 2025 12:52:02 by Calvin van Wieringen

Updated 19 June 2025 13:23:20 by Jonathan Cox