

Paradox 1738 Programming

Very old panel - defaults are mostly wrong, use settings below

Programming Locations

Location 087

- Enter **001** for daily test

Location 110

- Enter **0000**

Location 131

- LED 1 **OFF** (report disarm always)
-

Dialer Options

Location 135 (Tone dial)

- LED 3, 4, 5 **ON**
- All other LEDs **OFF**

Location 136 (Auto Contact ID)

- LED 3 **ON**
 - All other LEDs **OFF**
-

Communication Settings

Location 140

- LED 5 **ON** (Contact ID)

Location 143

- P1 Account code

Location 144

- P2 Account code

Location 151

- Tel number **5555555** (5x7)

Location 152

- Tel number **5555555** (5x7)
-

Important Notes

- This is a very old panel model
-

Revision #2

Created 10 June 2025 12:45:45 by Calvin van Wieringen

Updated 19 June 2025 13:05:55 by Jonathan Cox