

# Paradox Evo 192 Triggers

Configuration for direct trigger inputs using PGM outputs

---

## Prerequisites

### Before starting:

1. Ensure jumper for PGMs is set to **positive** on panel motherboard
2. If not set:
  - Shut down panel
  - Change jumper position
  - Power up again

**Important:** PGM1 stays negative - only PGM 2, 3, and 4 become positive

---

## PGM2 Configuration (Panic)

### Location 0920

- Enter: **030 255 000 000**

### Location 0928

- Enter: **005**

### Location 0929

- LEDs 1 and 3 **ON**
- 

## PGM3 Configuration (Burglary)

### Location 0930

- Enter: **024 255 000 000**

### Location 0938

- Enter: **005**

### Location 0939

- LEDs 1 and 3 **ON**
- 

## PGM4 Configuration (Open and Close)

### Location 0940

- Enter: **064 255 000 000**

### Location 0948

- Enter: **000**

### Location 0949

- All LEDs **OFF**
- 

## Wiring Notes

- Connect radio's Z4 (AC fail) to 1st AC connect block on panel
  - Keep PGM wiring away from high voltage lines
  - Test each PGM after configuration
- 

Revision #3

Created 10 June 2025 12:49:02 by Calvin van Wieringen

Updated 19 June 2025 13:15:55 by Jonathan Cox