

Paradox MG5050 and SP6000 Programming

Tested on Plus range version 1.30

Basic Programming

Section 810

- Select **44** for Contact ID

Section 811

- Account number for partition 1

Section 812

- Account number for partition 2

Section 815

- Enter **5555555**

Section 817

- Enter **5555555**
-

Enabling the Dialer

The status light on panel will be solid when dialling. If not dialling, check:

Section 800

- Option 8 must be **OFF**
- Options 4, 5, 6, 7 must be **ON**

Section 802

- Options 1, 2, 5, 6 must be **ON**

Section 803

- Options 1, 2, 5, 6 must be **ON**

Section 805

- Option 2 must be **ON**
-

Opening/Closing Reports

If closings work but not openings:

Section 801

- All options must be **OFF**
-

Serial Programming Notes

these are **MANDATORY**:

Section 910

- Must be cleared using sleep button (once per digit)

Section 911

- Must be cleared using sleep button (once per digit)
-

Troubleshooting Tips

1. **Panel won't send despite correct programming:**
 - Rarely, a default may be needed
 - Power down, default, reprogram
 2. **Account number issues:**
 - **MUST** be entered at both 811 and 812
 - With LED keypad: type account code twice at loc 811
 3. **PGM trigger issues:**
 - Jumper on motherboard above PGMs sets positive trigger
 - One model only sets one PGM as positive (not both)
 - Paradox fixing in next PCB version
 4. **6500 Panel on serial:**
 - Does not send account code
 - Only sends signal ONCE
-

Clear Event Buffer

For 5050 and 6000:

1. Enter programming mode
2. Press Stay key once
3. Press Clear key once
4. Power panel down
5. Power up and send signals

For SP65:

- Press Power button → Installer code → Memory → 9 → Enter key
-

Revision #3

Created 10 June 2025 12:46:04 by Calvin van Wieringen

Updated 27 May 2026 13:56:00 by Jonathan Cox