

# Paradox MG5050 and SP6000 Programming

*Tested on Plus range version 1.30*

---

## Basic Programming

### Section 810

- Select **44** for Contact ID

### Section 811

- Account number for partition 1

### Section 812

- Account number for partition 2

### Section 815

- Enter **5555555**

### Section 817

- Enter **5555555**
- 

## Enabling the Dialer

The status light on panel will be solid when dialling. If not dialling, check:

### Section 800

- Option 8 must be **OFF**
- Options 4, 5, 6, 7 must be **ON**

### Section 802

- Options 1, 2, 5, 6 must be **ON**

### Section 803

- Options 1, 2, 5, 6 must be **ON**

## Section 805

- Option 2 must be **ON**
- 

## Opening/Closing Reports

If closings work but not openings:

### Section 801

- All options must be **OFF**
- 

## Babyware Programming

If using Babyware, these are **MANDATORY**:

### Section 910

- Must be cleared using sleep button (once per digit)

### Section 911

- Must be cleared using sleep button (once per digit)
- 

## Troubleshooting Tips

1. **Panel won't send despite correct programming:**
    - Rarely, a default may be needed
    - Power down, default, reprogram
  2. **Account number issues:**
    - MUST be entered at both 811 and 812
    - With LED keypad: type account code twice at loc 811
  3. **PGM trigger issues:**
    - Jumper on motherboard above PGMs sets positive trigger
    - One model only sets one PGM as positive (not both)
    - Paradox fixing in next PCB version
  4. **6500 Panel on serial:**
    - Does not send account code
    - Only sends signal ONCE
- 

## Clear Event Buffer

For 5050 and 6000:

1. Enter programming mode
2. Press Stay key once
3. Press Clear key once
4. Power panel down
5. Power up and send signals

For SP65:

- Press Power button → Installer code → Memory → 9 → Enter key
- 

Revision #2

Created 10 June 2025 12:46:04 by Calvin van Wieringen

Updated 18 December 2025 06:18:06 by Jonathan Cox