

Paradox MG5050 DIALER + VERSION

Extended programming guide for MG5050 with dialer module

Enable Dialer

Section 800

- Put numbers 4, 5, 6, 7, 8 **OFF** (this enables dialer)
-

Basic Configuration

Section 810

- Enter **44**

Section 811

- Enter account number for telephone 1

Section 812

- Enter account number for telephone 2

Section 815

- Enter telephone number of base station/Radio
 - Press Enter after entering number
-

Event Call Direction

Section 801

- Put all numbers **OFF** (Opening signal must always report)

Section 802

- Number 1 **ON** (Opening/Closing signals will report)
- Number 5 **ON** (Burglary Signals will report)

Section 803

- Number 1 **ON** (Tamper signals will report)
- Number 5 **ON** (Trouble signals will report)

Section 804

- Number 1 **ON** (Special codes will report)

Section 805

- Only number 2 **ON**
-

Additional Settings

Section 966 1, 2, 3, 4, 5, 6, Enter

Section 967 1, 2, 3, 4, 5, 6, Enter

Revision #2

Created 10 June 2025 12:50:46 by Calvin van Wieringen

Updated 19 June 2025 13:18:15 by Jonathan Cox