

# Texecom 412/816/832 Programming

Standard Texecom panels with **red serial cable**

---

## Version Information

### Texecom 412/816:

- Known working app versions: V16.13

### Texecom 832:

- Known working versions: v13, v14 (E)

**Note:** Texecom Elite panels are NOT supported on app, but work with serial for CID

---

## Basic Programming

### Access Programming:

- Installer code + Menu + 9
- Default installer code: **1234**

### Location 70

- Switch ON LEDs 1, 2, 5, and 8
- Press ARM button to confirm

### Location 71 Programming:

- **71/0** = **5555555** (tel number) - Press ARM button
- **71/1** = **[4-digit account number]** - Press ARM button
- **71/2** = **4** (Contact ID) - No need to press ARM
- **71/3** = **6** (dial attempts) - No need to press ARM
- **71/5** = Switch ON all LEDs - Press ARM button
- **71/8** = LED 8 OFF for Tip & Ring / ON for Serial

### Location 76

- **76/8** = LED 8 ON (Dialler)

---

# Serial Connection Configuration

For serial connection ONLY:

- **71/8 = LED 8 ON**
- 

## Texecom 412 Serial Specific

*Known working app version: V14*

### Location 70

- Switch ON LEDs 1, 2, and 8 only
- Press ARM button

### Additional for Serial:

- **71/8 = Switch ON 8**
- **76/5 = 3** (com IP on Comm 1)

### OR (NOT BOTH)

- **76/9 = 3** (com IP on Comm 2)
- 

## Converting from Serial to Tip & Ring

If panel was previously on serial and now using Tip & Ring:

- **71/8 = 0**
  - **76/5 = 0**
- 

## Special Notes

### Texecom 816:

- Serial cable connection must be a Texecom GSM type
- 

Revision #3

Created 10 June 2025 12:51:15 by Calvin van Wieringen

Updated 11 December 2025 08:26:15 by Jonathan Cox