

# Texecom MiAlarm PANEL MODE

Configuration for MiAlarm compatibility

**Note:** Texecom Elite panels are NOT supported on app, but work with serial for CID

---

## Programming Steps

- 1. Enter Programming Mode**
    - Enter Installer Code
    - Press Menu button
    - Press 9
  - 2. Location 76/0**
    - Press location 76
    - Press sublocation 0
    - Ensure LED 1 is **ON**
    - If not ON: Press 1, then YES/Tick button
  - 3. Location 76/2**
    - Press location 76
    - Press sublocation 2
    - Enter UDL code: **1234**
    - Press YES/Tick button
  - 4. Location 76/5**
    - Press location 76
    - Press sublocation 5
    - Press **3**
  - 5. Exit Programming**
    - Press Menu button
    - Press 99
- 

## Important Notes

- This configuration enables MiAlarm compatibility
- 

Revision #2

Created 10 June 2025 12:51:40 by Calvin van Wieringen

Updated 19 June 2025 13:21:58 by Jonathan Cox