

Mi64

Complete installation and programming guide for Mi64 alarm system

[mi64 Installer Manual](#)

- [HTML Installer Guide](#)
- [Wireless Devices](#)

HTML Installer Guide

html version of mi64 Installer Manual

[mi64-Installer-Manual.html](#)

Wireless Devices

Requires Software version 6.64 (can be checked on the website)

Programming

Location 409 - Serial Port Type

- Input a value of **2** for mi64 Wireless Devices

Location 200 - Add wireless device

- Input zone number then [*] and hold down the LED on the wireless device until keypad beeps.

Location 454 - Remove wireless device

- Enter zone number and then [*] to remove the device attached to that zone.

Location 0 - Remove **ALL** wireless device

- Enter value of **6** and then [*] to remove all the wireless mi64 devices from the panel.
-

Notes

- Devices are pinged every 17hours to confirm they are alive.
- Devices are polled for battery life every 17hrs.
- Tamper Switch is held down by the bracket on the passive not actually the back of the passive.