

System Messages

List of all the system messages.

- [List](#)

List

| code | description | dataType | comments | +-----+-----+-----
+-----+-----+-----

| 1 | Low battery shutdown | | When system power falls to 9.5V, unit sends this msg and then shuts down till power restores above 10V for GSM9, 11.5V for Mi64 |

| 2 | Remote fob low battery | User | The number after the code identifies the fob as the number it reports as |

| 3 | APN Failed | Network | If a dual SIM fails to attach to APN on one SIM the other SIM will report it. |

| 4 | Warning zone | Zone | A buzz zone was triggered on a mi64 or mi8 |

| 5 | Access | Zone | Send a push notification to user when zone triggered (1) or restored(2) when disarmed

| | 6 | RF sensor low battery | Zone |

| 7 | RF sensor missing | Zone | An rf sensor has not sent a message in 18 hours.

| | 8 | GSM Failed | Sim | Reported a previous failure on attempting to connect to GSM - data is SIM that failed |

| 11 | GSM Restored | Sim | Reconnected to a previously failed network |

| 10 | Tech test | Zone | mi64 can be put into a mode that will send fintech notifications for all zones for 20 mins |

| 9 | Admin msg | | | +-----+-----+-----

+-----+-----+-----+